

PARTS MANUAL

MODELS 3005 & 3008

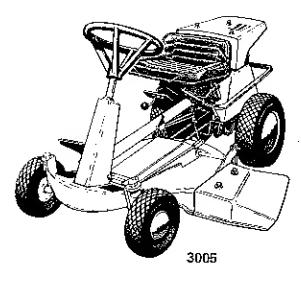

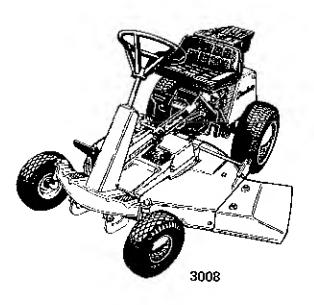

5 H.P. / 26" RIDING MOWER MFG. NO. 1690240 8 H.P. / 30" RIDING MOWER MFG. NO. 1690242

ATTACHMENTS & ACCESSORIES

MFG. NO. 1600236 MFG. NO. 1690180 MFG. NO. 1600408 MFG. NO. 1600333 MFG. NO. 1600238

Attention Dealers:

This manual is one of the new style parts manuals which Simplicity is issuing. We trust you will find that this manual contains more information than previously offered in parts manuals, including important facts which will help you with repair work and parts ordering.

The new loose-leaf format allows for easier updating of specific sections should it be necessary and, in general, makes the manual easier to work with in day to day use.

For quick, accurate reference when making warranty claims, group numbers are now given with each parts section. Also note that serial numbers of units are now listed to locate any difference in parts which may occur in later models. Be aware of these unit serial numbers when ordering parts.

Standard torques appear in a chart at the end of the manual, while important individual torques are given on specific parts drawings. These provide easy reference notes for repair and troubleshooting.

CRITICAL and MAJOR notations point out important facts or instructions which relate to safety or reliability and machine quality. The CRITICAL notation (E) pinpoints characteristics which, if not properly, followed, can create a safety hazard. The MAJOR notation (M) marks characteristics which, if not properly followed, may result in operating failure, shortened product life, or greatly reduced quality of the unit.


We are confident that you will find that these new format parts manuals contain more complete information for your benefit, and that they are much easier to use.

Simplicity
Technical Publications

© Simplicity Manufacturing Co., Division of Allis-Chalmers Corporation, 1976

Table of Contents


FRAME, FRONT WHEELS & STEERING GROUP (3005 & 3008)	
TRANSMISSION GROUP (3005 & 3008)	4
DRIVE & CONTROL SUB GROUP (3005 & 3008)	E
CLUTCH, BRAKE, DRIVE & CONTROL GROUP (3005 & 3008)	
ENGINE & SEAT GROUP (3005) 1	
ENGINE & SEAT GROUP (3008) 1	
FRAME, REAR WHEELS & ELECTRICAL GROUP (3005 & 3008)	4
HOUSING, ARBOR & ROLLER SUB GROUP (3005) 1	le
CONTROLS, LINKAGE, DEFLECTOR & MISC. GROUP (3005)	18
HOUSING, ARBOR & ROLLER SUB GROUP (3008)	?(
CONTROLS, LINKAGE, DEFLECTOR & MISC. GROUP (3008)	2
DUMP CART 2	!/
30" GRASS CATCHER 2) (
30" GRASS CATCHER ADAPTOR 2	28
26" GRASS CATCHER ADAPTOR 2	28
HUB CAPS — WONDERBOY 3	}(
STANDARD HARDWARE TORQUE SPECIFICATIONS	ė

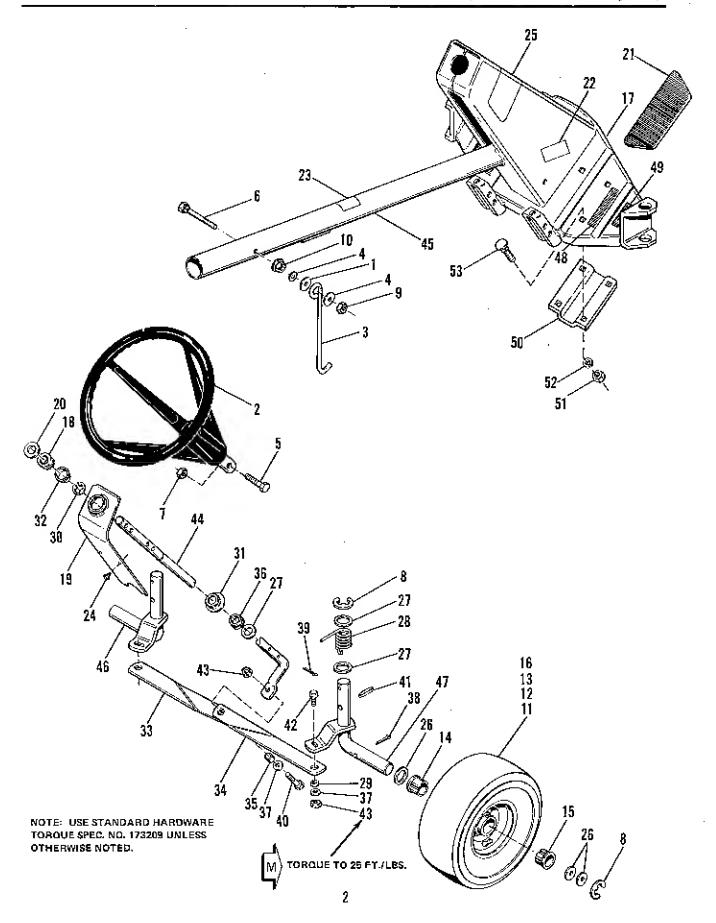




	Ī				
Ref.	Part				
No.	No.	Oty.	Seriel No.		Description
					<u> </u>
	450484				
1	159134	1	(000001-()	WASHER, Special
2	176501	1	(00000)-(ŀ	WHEEL, Steering
3	176709	1	(00000)-(HOOK, Mower
4	917642	3	(00000)-(•	WASHER, Plain, 5/16
5	921221	1	(00000)-()	CAPSCREW, Hex Hd., 5/16-18 x 1-1/2
G	922589	1	(00000)-(1	BOLT, Carriage, 3/8-16 x 3-1/2
7	923362	1	(00000)-()	NUT, Hex Lock, 5/16-18
8	927794	4	(00000)-(•	RING, E. 3/4
9	928731	1	(00000)-()	NUT, Hex, Lock, Jam, 3/8-16
10	930645	1	{000000}-{	,	NUT, Flange, 3/8-16
11	1608379	2	(00000)-()	WHEEL & TIRE ASSY, Front
12	163108	2	{000000}-{)	TIRE, 4.10 - 3.50 x 4
13	163109	2	(00000)-()	TUBE, 4.10 - 3.50
14	163110	1	1-(00000)]	BEARING
15	163111	1	(00000)-(ì	BEARING, Relief
16	1608380	2	(00000)-{	þ	WHEEL, Front
17	106718	1	(000000)-{)	DECAL, Simplicity
18	157077	1	100000)-1)	BUSHING
19	158215	1	[00000] [)	COVER, Steering Support
20	158223	1	(00000)-(1	WASHER, Nylon
*21	15842B	2	(00000)-(1	PAD, Foot, E.H. & R.H.
22	174924	1	(00000)-()	DECAL, Instruction
23	177078	1	{000000}-{)	DECAL, Parking Brake
24	929477	2	1-(00000)	ŀ	SCREW, Hex, Wahr Hd., Taptite, No. 10-24 x 1/2
25	1657106	1	(00000)-1	j	DECAL, Steering Column
26	101022	6	{0000a0}·()	WASHER, 3/8
27	108181	5	(00000)-(1	WASHER, 3/8
28	121011	2	[00000]-[]	SPRING, Torsion
25	153081	2	[00000]-()	SPACER
30	157241	1	[00000]-[]	AtNG, Snap
31	158012	1	(00000)]	CUP, Steering Shaft
32	158222	1	1-(00000)	i	CLIP, Steering Bush
33	158225	1	1-(00000)	i i	LINK, Steering, L.H.
34	158226	1	1-(00000)	i	LINK, Steering, R.H.
35	158227	1	(00000)-(í	SPACER
35	159026	1	1-(00000)	i	BUSHING
37	917378	3	(00000)-(i	WASHER, Plain, 3/B
38	919314	2	(00000)-(i	PIN, Cotter, 3/16 x 1-1/4
39	919430	2	1-(00000)	Ġ	PIN, Cottor, 5/32 x 1-1/4
40	921969	1	(00000)-(i	CAPSCREW, Hox Hd., 3/8-16 x 1-1/2
41	925362	2	(ODOOO)-(i	PIN, Spring, 5/16 x 1-1/4
42	92872B	2	(ODOOQ)-(SCREW, Hex, Flange, Whiz Lock, 3/8-16 x 1
43	930651	3	(00000)-(NUT, Hex, Center Lock, 3/8-16
44	150894B	1	(DOODD)-(SHAFT, Steering
45	1609448	1		- (-
46	-	1	1000000)-{	,	AXLE & FRAME ASSY, Front
47	1656410 1656411	1	100000)-1 1000000)-1	,	SPINDLE ASSY, L.H.
^ 48	1656411 162098	2	100000)-(1	SPINDLE ASY , R.H.
1 49			[00000]-[,	PAD, Pedal
** 50	1609454	2 2	(000000)-(J S	PAD, Pedal
1151	1609426		(00000)-()	HITCH ASSY, Mower
*152	916950 916966	6	(00000)-()	NUT, Hex, 3/8-16
** 53	916965 622221	6	(00000)-()	LOCKWASHER, Spring, 3/8
33	923232	6	(000001	1	BOLT, Carriago, 3/8-16 x 1

NOTE: * Used Only On Mfg. No. 1690240 ** Used Only On Mfg. No. 1690242

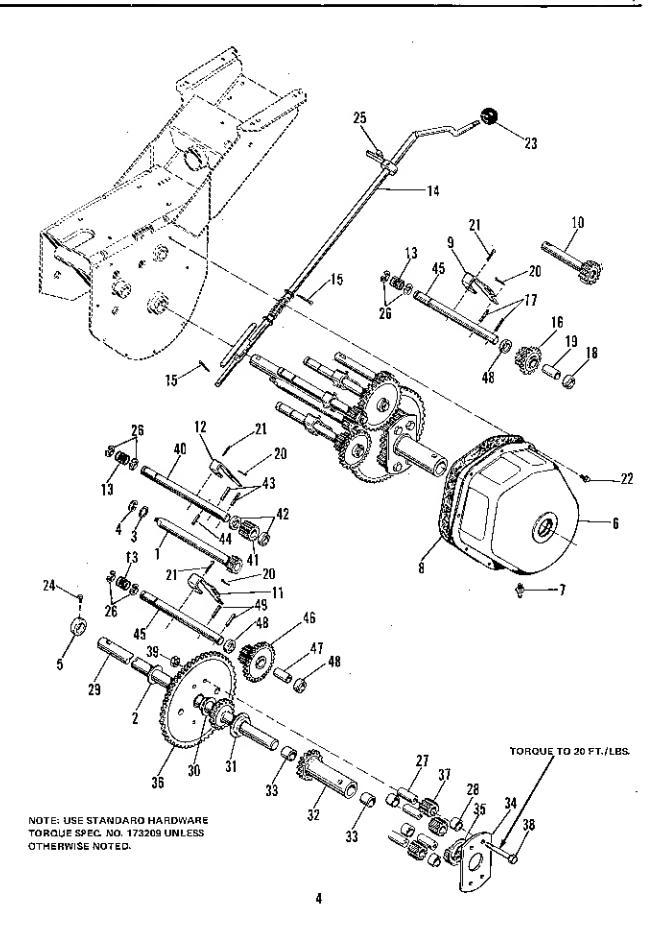

		.=			
Ref. No.	Part No.	Oty.	Serial No.		Description
	14ij.	chth.	Selle No.	•	Выстрион
1	106944	1	(00000)-4	ì	SHAFT & GEAR ASSY
2	118252	1	1-(00000)	j	WASHER, Special
3	153079	1	(00000)-(j	WASHER
4	153124	ſ	(00000)-(j	RING, Retaining
5	158357	1	(00000)-(1	COLLAR, Set
Б	158521	1	(00000)-()	CASE ASSY, Gear
7	928724	1	1-(00000))	FITTING, Lube, 7/16
8	158524	1	(00000)-()	GASKET, Gear Case
9	158535	1	(00000)-(1	LINK, Shift, HI.
10	15854B	7	(00000)-(1	BRAKE, SHAFT & GEAR ASSY
11	158563	1	(00000)-(1	LINK, Shift, Lo
12	158564	1	(00000)-{)	LINK, Shift, Reverse
13	158578	3	(DDDDD)-(þ	SPRING
14	176438	1	[00000]-(-)	ROD ASSY, Shift
15	918452	2	(00000)-()	PIN, Cotter, 1/8 x 1
16	158570	1	(00000)-{)	GEAR & BEARING ASSY
17	918111	4	(00000)-(]	PIN, Spring, 1/8 x 1
1B	158561	4	(000001-1	}	COLLAR, Threat
19	158544	2	(00000)- (}	BEARING
20	918447	3	(00000)-{]	PIN, Cotter, 3/32 x 3/4
21	919314	3	[00000]-{	1	PIN, Cotter, 3/16 x 1-1/4
22	927428	9	(00000]-()	SCREW, Hex., Wahr. Hd., Taptite, 1/4-20 x 3/8
23	8021050	1	(00000)-(]	BALL, Knob
24	928709	1	(00000)-()	SCREW, Hex. Sq. Hd., Cup Pt., 5/16-18 x 3/8
25	928721	1	(00000)-(1	SCREW, Hex, Sq.Hd., Cup Pt., 5/16-18 x 1/2
26	1602155	6	(00000)-(•	RING, E
27	121083	4	(00000)-()	SPACER, Pinion DIII.
28	121084	4	(00000)-()	SPACER, Diff.
29	158352	1	(00000)-(1	AXLE ASSY, L.H.
3 D	158356	· 1]-(00000])	BUSHING
31	158358	1	[00000] ()	CUP, Thrust
32	158359	1	(00000)-(]	AXLE & BUSHING ASSY
33	158363	2	[00000]-[1	BUSHING
34	158364	1	(00000)-()	PLATE, Differential
35	158365	1	(00000)-(1	8U\$HING
36	156530	1	(00000)-(ŀ	GEAR, Drive
37	158579	4	(00000)-()	PINION, Differential
38	921972	4	1000001-0	ļ	CAPSCREW, Hex Hd., 3/8-16 x 2-1/2
39	923428	4	(00000)-{)	NUT, Hex, Full, Lock, 3/8-16
40	158534	1	(00000)-{)	SHAFT, Reverso
41	158557	1	[00000])	PINION, Reverse
42	158562	2	(00000)-{	,	COLLAR, Thrust
43	916168	2	{00000)-{)	PIN, Spring, 1/4 x3/4
44	921450	1	1-(00000))	PIN, Spring, 5/32 x 1
45	158541	2	[00000]-(ļ	SHAFT, Intermediate
46	158542	1	(00000)-{)	GEAR & BEARING ASSY

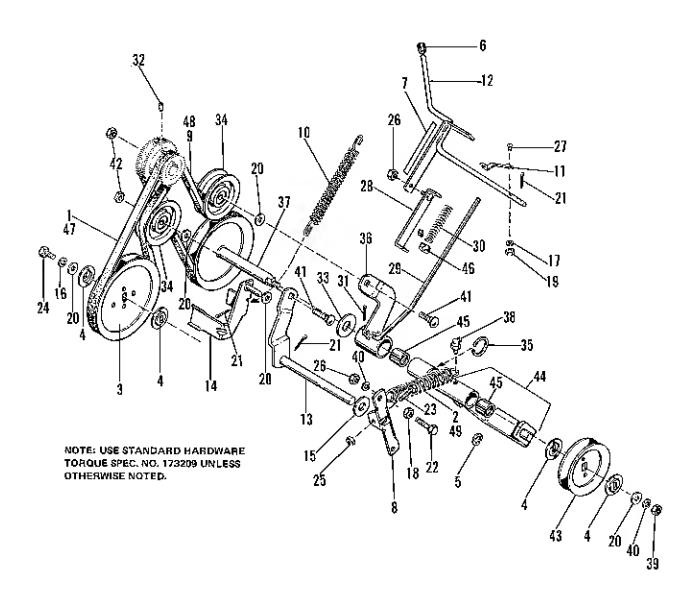


77-1

Ref.	Part				
No.	Mo.	Ūtγ.	Serial No.	•	Description
					•
11	121398	1	1-[00000}	}	BELT, V
• 2	154369	1	(00000) (j	SPRING, PTO
3	158377	1	{000000}-{	}	PULLEY
4	158378	4	(00000)-{	j	WASHER, w/Notch, 3/15
5	158399	1	(00000)-(,	RING, Retaining
6	158437	1	(00000)-()	KNOU
7	158452	1	1-[00000]	j	DECAL, Clutch
В	158536	1	loogen)-i]	LEVER, Clurch
٠9	158573	1	[00000]-(]	B6L1, V, Transmission
10	175290	1	[00000]-()	SPRING, Tension
11	176414	1	(00000)-()	CLIP, Spring
12	1/642/	1	(00000)-(J	HANDLE ASSY, Control
13	158537	1]-[000000])	ARM ASSY, Idler
14	176587	1	(00000)-(•	BRAKE ASSY, PTO
15	916960	1	(000001-(J	WASHER, Plain, 1/2
16	917356	2	(00000)-(•	LOCKWASHER, Spring, 6/16
1/	917365	1	[00000]-[)	LOCKWASHER, Spring, No.10-3/16
1B	917372	1	(00000)-(ł	NUT, Hex, 5/16-18
19	917415	1	(00000)-(1	NUT, Hex, Mach. No.10 32
20	917642	5	(00000)-(ŀ	WASHER, Plain, 5/16
21	918452	4	(00000)-(1	PIN, Cotter, 1/8 x 1
22	921221	1	(00000)-(ŀ	CAPSCREW, Hex Hd., 5/16-18 x 1-1/2
23	921960	1	1-(00000)	ŀ	CAPSCREW, Hax Hd., 1/4-20 x 1
24	923325	1	(00000)-()	CAPSCREW, Hex Hd., 5/16-18 x 7/8
25	923358	1	[000000]-[)	NUT, Hex, Lack, 1/4-20
26	923362	2	100000)-1	þ	NUT, Hex, Lack, 5/16-18
27	930494	1	100000)-1	,	\$CREW, Rd. Hd., No. 10-32 x 3/4
28	15B40G	1	1-(00000)	1	GUIDE ASSY, Rod
29	158609	1	[00000]-[)	ROD, PTO,Clutch
30	163103	1	J-{00000)	1	SPRING
31	918447	1	[000001-(1	PIN, Cotter, 3/32 x 3/4
32	928804	1	(00000)-(]	SCREW, Set, Sq. Hd., Cup Pt., 1/4-20 x 3/8, Gr.B
33	119018	1	[00000]-[1	WASHER
34	154534	2	(00000)-()	PULLEY, Idler
35	158396	1	(00000)-(1	RING, Retaining
36	158461	1	(00000)-(1	LEVER ASSY, Idler
37	158630	1	(000001-0	1	PULLEY & SHAFT ASSY
38	915019	1	(00000)-(FITTING, Lube, Elbow 90 ^D , 1/4-2B
39	916950	1	(00000)-()	NUT, Hex, 3/8-16
40	916965	1	(00000)-()	LOCKWASHER, Spring, 3/8
41 42	922249	2	(00000)-(•	BOLT, Rd. Hd., 3/8-16 x 1
42	923428 1 000004	2	(00000)-(þ	NUT, Hex. Full Lock, 3/8-16
4 3 44	1609004	1	1-(00000)	}	PULLEY
44 45	1611127		[000000]·4		HOUSING & BEARING SUB ASSY
45 46	108054 8191022	2 1	100000)-1	,	BEARING, Neetle
46 **47	1608954	1] -(000001 -(000001	1	COLLAR, Set
48	1608960	1	[00000)- -(00000)-)	BELT, V
**49	1609257	1			BELT SPRING PTO
-121	1003207	1	(000001)-1)	SPRING, PTO

NOTE: 1-Ref. No.'s 1, 2 & 9 Used on Mfg. No. 1690240

^{**} Ref. No.'s 47, 48 & 49 Used on Mfg. No. 1690242

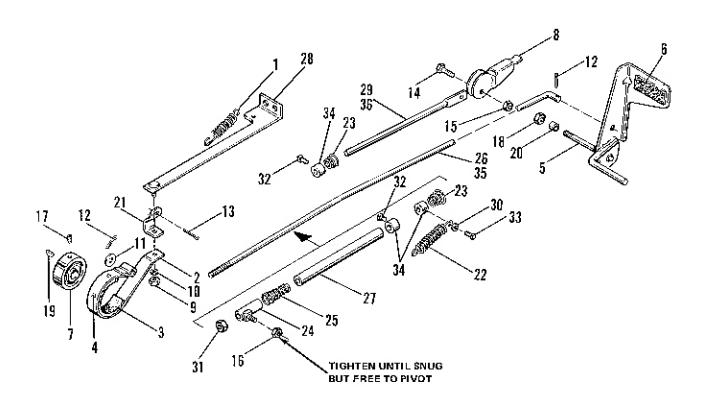


NOTE: USE STANDARD HARDWARE TORQUE SPEC. NO. 173209 UNLESS OTHERWISE NOTED.



Ref.	Part					77
No.	No.	Qty.	Serial No.	-	Description	
1	153121	1	(00000)-()	SPRING	
2	158552	1	(00000)-(í	BRAKE BAND ASSY	
3	156136	1	(00000)-(j	LINING, Brake	
4	923810	3	(00000)-(j	RIVET, Tubuler, 3/16 x 1/4	
5	158604	7	(00000)-(j	FOOT PEDAL ASSY	
6	162098	1	(00000)-(j	PAD, Pedal	
7	165067	1	(00000)-(j	DRUM, Brake	
8	176425	1	1-(00000)	j	LEVER	
9	916622	1	(00000)-(j	NUT, Hex, 1/4-20	
10	916964	1	(00000)-()	LOCKWASHER, Spring, 1/4	
11	917642	1	(00000)-(}	WASHER, Plain, 5/16	
12	918452	2	(00000)-()	PIN, Cotter, 1/4 x 1	
13	919430	1	(00000)-()	PIN, Cotter, 5/32 x 1-1/4	
14	921959	1	(00000)-(j	CAPSCREW, Hex Hd., 1/4-20 x 5/8	
15	923358	1	(00000)-{	j	NUT, Hex, Lock, 1/4-20	
16	923362	1	(00000)-()	NUT, Hex, Lock, 5/16-18	
17	928691	1	(00000)-()	SCREW, Set, Hex. Skt., 5/16-18 x 5/16	
18	930645	1	1-(00000))	NUT, Flange, 3/8-16	
19	930669	1	(00000)-()	KEY, Hi Pro, 5/32 x 5/8	
20	1608657	1	(00000)-(1	SPACER	
21	1609261	1	(00000)-{)	LEVER, Brake	
22	118495	1	1-(00000))	SPRING	
23	163010	2	(00000)-{	}	SPRING, Hood	
24	156303	1	(00000)-(}	GUIDE ASSY, Rod	
25	157041	1	1-(00000))	SPRING, Compression	
° 26	158575	1	(0000D)-{	1	ROD, Clutch	
27	172179	1	(00000)-{	1	SPACER	
28	176429	1	1-(00000)-{	}	GUIDE ASSY, Brake	
* 29	176431	1	}-(000000)-{)	ROD, Brake	
30	916955	1	[00000]-[•	WASHER, Plain, 3/16	
31	924433	1	[00000]-[)	NUT, Esna	
32	928804	2	(00000)-(•	SCREW, Set, Sq. Hd., Cup Pt., 1/4-20 x 3/8, Gr. 8	.
33	930539	1	{000000}-(}	SCREW, Set, Sq. Hd., Cop Pt., 1/4-20 x 5/8, Gr. 8	Ļ
34	8191022	3	(00000)-{	}	COLLAR, Set	
**35	1608961	1	(00000)-(}	ROD, Clutch	
** 36	1609442	1	(00000)-()	ROD, Brake	


NOTE: "Het. No.'s 26 & 29 Used On Mfg. No. 1690240 "* Rof. No.'s 35 & 36 Used On Mfg. No. 1690242

SImplicity

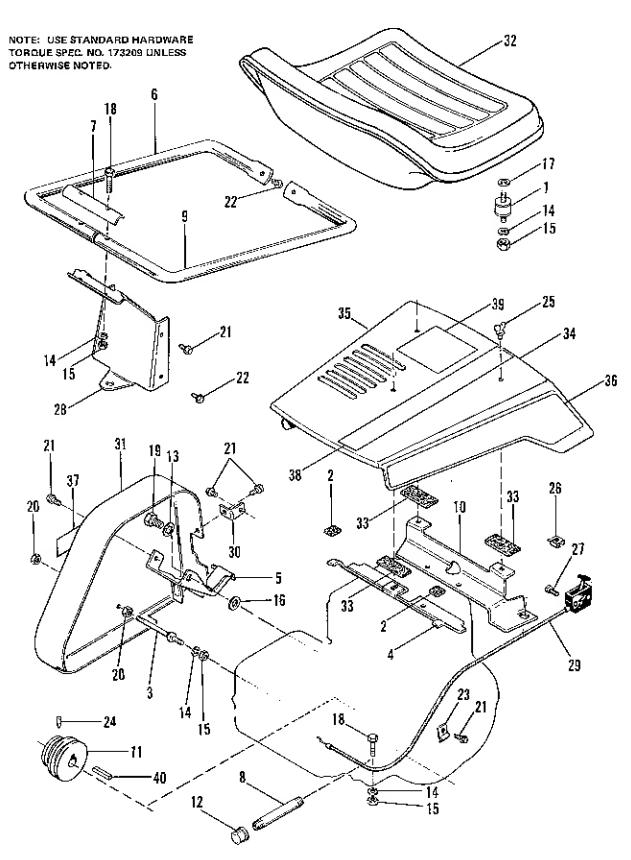


Ref.	Part					77-1
No.	No.	Qty.	Serial No	•	Description	
1	157094	4	(00000)-{	1	CONNECTOR, Cushion	
2	157582	2	(00000)-()	BUTTON, Bumper	
3	158418	1	(00000)-{	}	STUD, Pulley Guard	
4	158449	1	(000000)-(1	SUPPORT, Rear Hood	
5	158527	1	(000000)-(}	STOP, Belt	
6	158 58 3	1	(00000)-{)	HANDLE, Rear, L.H.	
7	158584	1	(00000)-()	BRACKET, Support Handle	
8	158610	1	(00000)-()	NIPPLE, Pipe	
9	174629	1	(00000)-()	HANDLE, Rear, R.H.	
10	174746	1	(00000)-()	SUPPORT, Front Hood	
11	176584	1	(00000)-()	PULLEY	
12	901751	1	1-(00000))	CAP, Pipe	
13	909589	1	(00000)-()	LOCKWASHER, Internal Tooth, 1/2	
14	917356	12	(000000)-(3	LOCKWASHER, \$pring, 5/16	
15	917372	12	(00000)-(1	NUT, Hex, 5/16-18	
16	918431	1	(00000)-()	WASHER, Plain, 1/2	
17	919381	4	(00000)-(1	WASHER, Plain, 5/16	
18	921221	6	(000001-0)	CAPSCREW, Hex Hd., 5/16-18 x 1-1/2	
19	921370	1	(00000)-()	CAPSCREW, Hex Hd., $1/2-20 \times 1$	
20	923362	2	(00 0000)-()	NUT, Hex, Lock, 5/1 6 -18	
21	924856	7	(00 00 0) -()	SCREW, Tapping, 5/16-18 x 1/2	
22	925003	3	{000000}-{)	SCREW, Tapping, 1/4-20 x1/2	
23	9262/1	1	(00000)-()	CLIP, Closed	
24	928691	1	(00000)-(}	SCREW, Set, Hex Skt., 5/16/18 x 5/16	
25	928693	3	(00000)-{	ŀ	SCREW, Wing, 5/16-18 x 3/4	
26	928701	3	(00 000)-(ŀ	NUT, Retainer, 5/16-18	
27	928732	2	(00000)-(}	SCREW, Tap, Hex, Wash, Hd., No.10-24 x1	
28	1608938	1	(00000)-(1	HITCH PLATE, Rest	
29	1608962	1	(00000)-(1	THROTTLE & CHOKE ASSY	
30	1609444	1	(00000)-()	BRACKET, Pulley Guard	
31	1609449	1	[00000]-[1	GUARD, Policy	
32	1651879	1	(00000)-(- 1	SEAT ASSY	
33	121399	3	(00000)-(J	GASKET, Felt	
34	158515	1]-(00000]	}	HOOD ASSY	
35	1657104	1	(00000)-[1	DECAL, Hood, R.H.	
36	1667105	T	1-(00000)	7	DECAL, Hood, L.H.	
37	1657108	2	(00000)-(1	DECAL, 3005	
38	1657169	1)-{QQQQQ))	DECAL, Stripe	
39	1657293	1	(00000)-(1	DECAL, Safety	
40	8221042	1	(00000)-(1	KEY	

Simplicity 5 cm

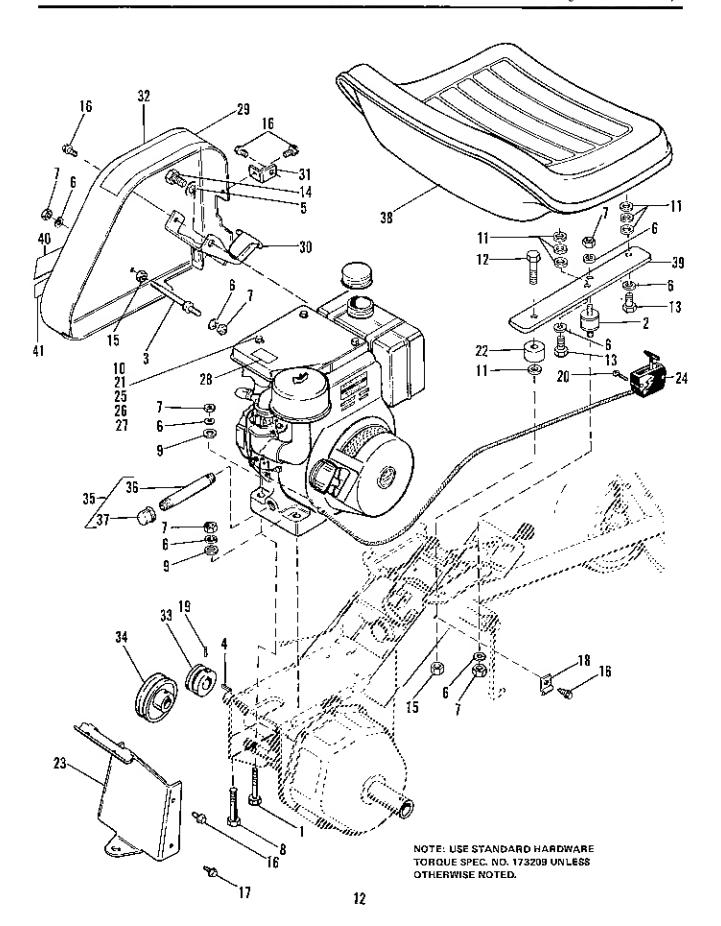




					· · · · · · · · · · · · · · · · · · ·
Flef.	Part				
No.	No.	Qty.	Sarial No.		Description
1	156151	1	1-(00000)	,	SCREW, Hex
2	157094	2	(000001-(j	CONNECTOR, Cushion
3	158418	1	(00000)-(j	STUD, Pulley Guard
4	905100	1	(00000)-(í	KEY, Parallel, Pisin, 1/4 x1/4 x 2-1/4
5	909589	1	(00000)-(1	LOCKWASHER, Internal Tooth, 1/2
6	917356	14	(00000)- ()	LOCKWASHER, Spring, 5/16
7	917372	10	(000001-(1	NUT, Hex, 5/16-18
8	917398	3	(00000)-()	CAPSCREW, Hex Hd., 5/16-18 x 1-3/4
9	917642	4	(00000)-(]	WASHER, Plain, 5/16
10	919316	1	[00000]-[)	CAPSCREW, Hex Hd., 1/4-20 x1-3/4
11	919381	14	(00000)-[1	WASHER, Plain, 5/16
12	921221	2]-[00000]]	CAPSCREW, Hex Hd., 5/16-18 x 1-1/2
13	921333	4	1-[00000]	}	CAPSCREW, Hex Hd., 5/16-18 x 1
14	921370	1	{000000}-(ŀ	CAPSCREW, Hex Hd., 1/2-20 x 1
15	923362	4	(00000)-(•	NUT, Hex, Lock, 5/16-18
16	924856	7	[00000]-[1	SCREW, Tapping, 5/16-18 x 1/2
17	925003	1	(00000)-(ł	SCREW, Tapping, 1/4-20 x 1/2
18	926271	1	{QQQQQ}-(CLIP, Closed
19	928691	1	{000000}-(}	SCREW, Set, Hex Skt., 5/16-18 x 5/16
20	928732	2	(00000)-(}	\$CREW, Tap, Hox, Wshr. Hd., No.10-24 x1
21	929000	2	(00000)-(•	SCREW, Tap, Hex, Wsbr. Hd., 1/4-20 x 3/8
22	1608535	2	(00000)-(ŀ	RUBBER MOUNT, Seat Cushion
23	1609938	1	(00000)-(•	PLATE, Hitch Rear
24	1608962	1	(00000)	þ	THROTTLE & CHOKE ASSY
25	1608963	1	(00000)-(ł	SHIELD, Heat
26	1608980	1	(00000)-(SUPPORT, Heat Shield
27	1608994	1	(00000)-()	SPACER
28	1609140	1	(00000)-(1	DECAL, Caution
29	1609232	1	(00000)-(DECAL, Safety
30	1609443	1	(00000)-(1	STOP, Belt
31	1609444	1	(ODDOD)-()	BRACKET, Pulley Guard
32	1609445	1	(00000)-(!	GUARD, Pulley
33	1609449	1	(00000)-(1	PULLEY, Engine
34 35	1609451	1	(00000)-()	PULLEY, Transmission Drive
36	1611125 201408	1	(00000)-(1	PIPE & NIPPLE
30 37	901496 001750	1	(00000)-(;	NIPPLE, Pipe, 3/8 x 4-1/2
38	901752 1661979	1	(00000)-()	CAP, Pipe, 3/8
39	1651879 1656400)-(00000) (000000))	SEAT ASSY
39 40	1656499 1657107	2)-(000000) 1-(000000))	SUPPORT, Soat
41	1657109	1	100000)-{ 100000)-{	í	DECAL, Cover DECAL, 3008

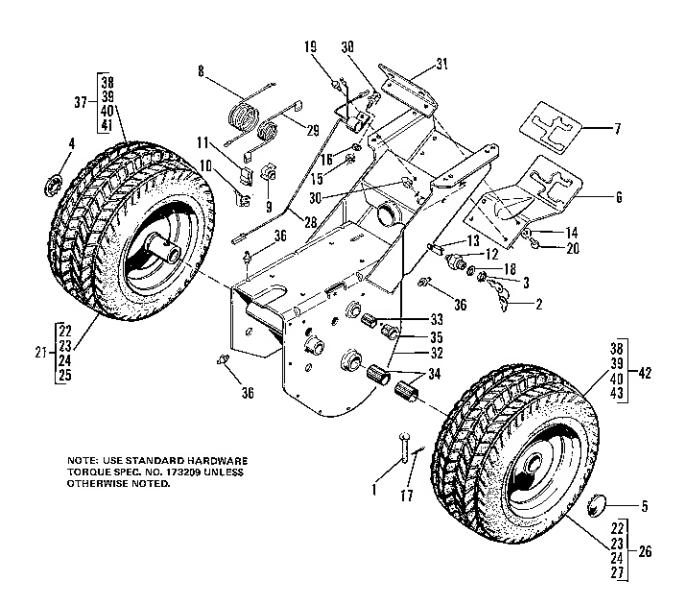




Ref. No.	Part No.	Ωty.	Serial No.		Description
1	118053	2	(00000)-()	PIN
2	122203	2	(00000) (i	KEY & RING ASSY
3	122234	1	1000001-1	j	NUT, Hex, 5/8-32
4	158433	1	1-(000000))	PLUG, Button
5	158436	1	(00000)-(]	PLUG, Button
6	172923	1	14000001	ì	PLATE, Shift Pattern
7	172989	1	(000001-(ì	DECAL, Shift Pattern
В	176480	1	(00000)-()	WIRE
9	176675	ı	(00000)-(ŀ	CLIP, Speed, Cable
10	176687	1	(00000)-(þ	CLIP, Speed, Cable
11	176701	2	(00000)-()	CLIP, Speed, Cable
12	177163	1	(00000)-()	SWITCH
13	177164	1	(00000)-()	ADAPTOR
14	917377	4	(00000)-()	WASHER, Pleio, 1/4
15	917385	1	1000000)-1) -	NUT, Hex, Mach. No. 8-32
16	917489	1	(00000)- ()	LOCKWASHER, Internal Tooth, No. 8
17	918452	2	(100000)	ì	PIN, Cotter
18	918906	1	(00000)-(]	LOCKWASHER, Internal Tooth 5/8
19	927428	1	(00000)-1	1	SCREW, Hex, Wshr. Hd., Taptite, 1/4-20 x 3/8
20	927429	4	(00000) (H	SCREW, Hex, Wshr. Hd., Taptite, 1/4-20 x 5/8
"21	1608381	1]-[00000)]	WHEEL & TIRE ASSY, Rear, C.H.
122	153037	2	(00000)-()	TIRE
*23	153038	2	(00000) (H	TUBE, 4.00 x B
124	171270	2	(00000)-()	VALVE STEM & CAP
*25	1608382	1	(00000)-(,	WHEEL, Rear, L.H.
*25	1608383	1	(00000)-()	WHEEL & TIRE ASSY, Rear, R.H.
*27	1608384	1	(00000)-()	WHEEL ASSY, Rear, R.H.
28	1609276	1	1-(00000)	}	IGNITION, Interlock
29	1609277	1	(00000)-(ŀ	LEAD, Switch, Interlock
30	1609279	2]-[(00000)	J	SWITCH, Safety
31	1609280	1	(000001-[þ	GUIDE, Shift Rad
32	1656740	1	(00000)-(]	ENGINE BAŞE & BUŞHING ASŞY
33	156064	2	(00000)-(]	BU S HINĞ
34	158337	2	(000001-(ŀ	BUSHING
35	158569	2	(00000)-(1	BEARING, Bronze
36	912808	3	(00000)-(ŀ	FITTING, Lube, 1/4-28
**37	1608919	1_	(00000)-()	WHEEL & TIRE ASSY, Rear, L.H.
**38	159156	2	[00000]-[)	TIRE
* 39	1603991	2	[000000]-()	TUBE, 16 x 6-1/2 x 8
**40	156305	2	[00000]-()	VALVE STEM & CAP
** 41	1608917	1	(00000)-1]	WHEEL, Rear, L.H.
** 42	1608918	1	(000000)-()	WHEEL & TIRE ASSY, Rear, R.H.
** 43	1608916	1	(000001-(1	WHEEL ASSY, Rear, L.H.

NOTE: * Used Only On Mfg. No. 1690240 ** Used Only On Mfg. No. 1690242

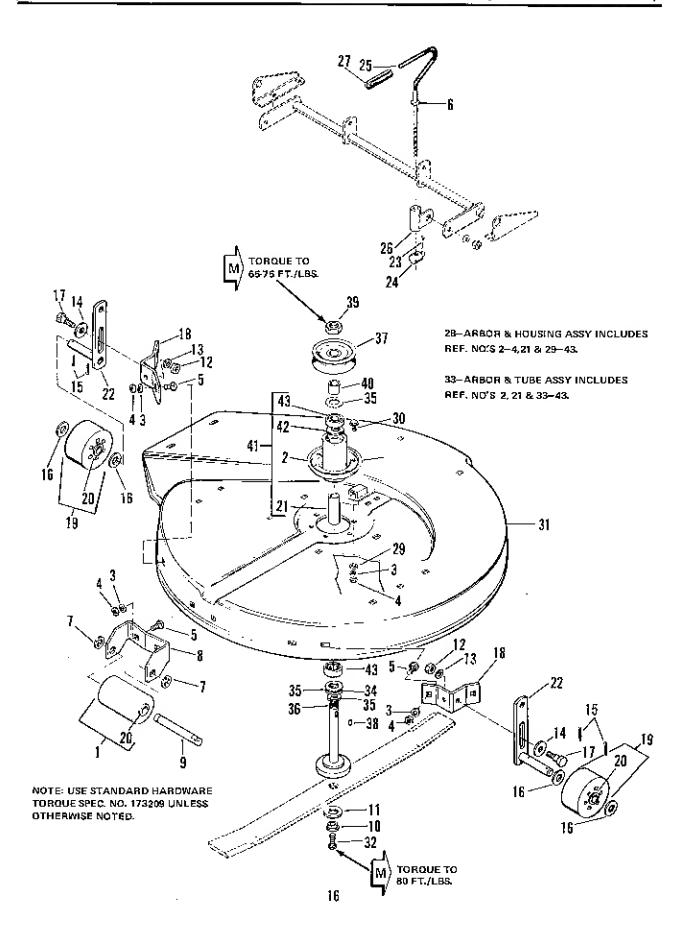




Ref.	Part				77-1
No.	No.	Oty.	Serial No.		Description
1	108431	1]-(00000))	ROLLER SUB ASSY
2	1608664	1	(00000)-()	TUBE ASSY, Arbor
3	917356	12	1000001-1	J	LOCKWASHER, Spring, 5/16
4	917372	12]-(00000}]	NUT, Hex, 5/16-18
5	919413	6	[000000]-[]	BOLT, Rd Hd., Sq., 5/16-18 x 5/8
6	924940	1	(000001)- (J	WASHER, Plain, 3/8
7	1602155	2	14000001	1	RING, E
8	1603204	1	(00000)-()	BRACKET, Center, Roller
9	1603205	í	(00000)-(1	SHAFT, Center, Roller
10	1605745	1	(000001-(1	WASHER, Shoulder
11	1605746	1	(00000)-(WASHER, Belleville
12	916950	2	(00000)-(i	NUT, Hex. 3/8-15
13	916965	2	(00000)-(j	LOCKWASHER, Spring, 3/8
14	918430	2	(00000)-(j	WASILR, Plain, 7/16
15	918458	4	(00000)-1	j	PIN, Cotter, 3/16 x 1
16	919387	4	(00000)-(í	WASHER, Plain, 5/8
17	1602186	2	(00000)-1	ì	BOLT, Shoulder
18	1602211	2	(00000)-	;	BRACKET, Roller Support
19	1603206	2	(00000)-1	1	ROLLER ASSY (loctudes 2 of Ref. No. 20)
2D	108419	6	1-(00000)	j }	
21	1602265	1	{000001-1	j	BUSHING SPACER
22	1607603	2	[00000]-[
		1]	SHAFT ASSY, Rotter
23	918448		[000000]	1	PIN, Cotter
24	108172	ţ	(000000)	ŀ	PIVOT
25	176775	1	[00000]-[}	HANDLE, Adjusting
26	176777	1	(00000))	GUIDE ASSY, Rod
27	176985	Ţ	(00000)-()	GAIP
28	1655071	1	(00000)-()	ARBOR & HOUSING ASSY fincludes Ref. No.'s 2-4, 21 & 29-
29	917642	6	(00000)-()	WASHER, Plain, 5/16
30	921332	6	(00000)-(]	CAPSCREW, Hex Rd., 5/16-18 x 3/4
31	1602181	1	1-(00000)	1	HOUSING, 26" Mower
32	1605933	1	(00000)-(ŀ	CAPSCREW, 1/2-20 x 1-1/2
33	103268	1	(00 000)- 1)	ARBOR & TUBE ASSY (Includes Ref. No.'s 2, 21 & 33-43)
34	108257	1	{000000}-{]	WA\$HER
35	108472	3	[000000]]	WASHER
36	174603	1	(000000)-(}	ARBOR ASSY
37	174910	1	[00000]-[ŀ	PULLEY, Mower
38	918312	1	(00000)-(•	KEY, Woodruff, No. 61
39	922133	1	(00000)-(ŀ	NUT, Hex, Lock, 3/4-16
40	1653481	1	(00000)-()	SPACER
41	1655073	1	(00000)-()	TUBE ASSY, w/Bearings
42	108134	1	{DDDDD0}-4)	RING, Backing
43	108202	2	{000000}-{	j	BEARING, 8all

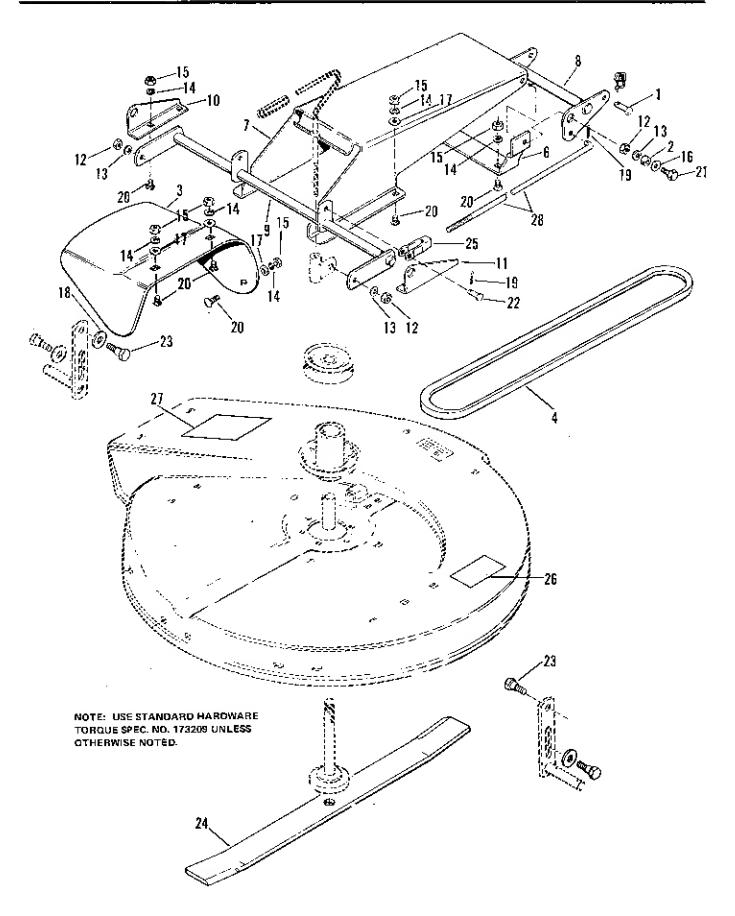


					•	
Ref.	Part				•	77-1
No.	No.	City.	Serial No		Description	
						
1	105249	2	[00000]-[J	PIN	
2	153081	2	(00000)-(j	SPACER	
3	174820	1]-[00000]	1	DEFLECTOR	
4	174911	1	(000001-()	BELT, V	
5	176012	2	(00000) (J	CLIP, Pin, Safety	
6	176/3/	1	(00000)-(]	BRACKET	
,	176738	1	(00000)-(ì	COVER, Belt	
В	176763	1	(00000)-(J	BELLCRANK ASSY	
9	176765	1	(00000)-(]	LEVER ASSY	
10	176769	1	(00000)+()	BRACKET, Pivot, L.H.	
11	176770	1	(0000DI-()	BRACKET, Pivot, R.H.	
12	916950	4	(00000)-(ŀ	NUT, Hex, 3/8-16	
13	916965	4	(00000)-(þ	LOCKWASHER, Spring, 3/8	
14	917356	13	(00000)-1	J	LOCKWASHER, Spring, 5/16	
15	917372	13	(00000)-(ŀ	NUT, Hex, 5/16/18	
16	917378	2	(00000)-(ŀ	WASHER, Plain, 3/8	
17	917642	3	(00000)-()	WASHER, Plain, 5/16	
18	918430	1	1-(00000)	ŀ	WASHER, Plain, 7/16	
19	918448	4	(00000)	•	PIN, Catter, 3/32 x1	
20	919413	13	(00000)-()	BOLT, Rd. Hd., Sq. Nk., 5/16-18 x 5/8	
21	921210	2	1-(00000)	ŀ	CAPSCREW, Hex Hd., 3/8-16 x 1	
22	923087	2	1.(00000))	PIN, Yoke, 3/8	
23	1602186	2	(00000)-()	BOLT, Shoulder	
24	1607534	1	(00000)-(•	BLADE, Mower	
25	108157	1	(00000)-()	CLEVIS, Adjusting	
26	1655856	1	[00000]-()	DECAL, Danger	
27	1656857	1	(000000)-()	DECAL, Danger	
28	176768	1	(00000)-(ŀ	RO(), Height Adjusting	

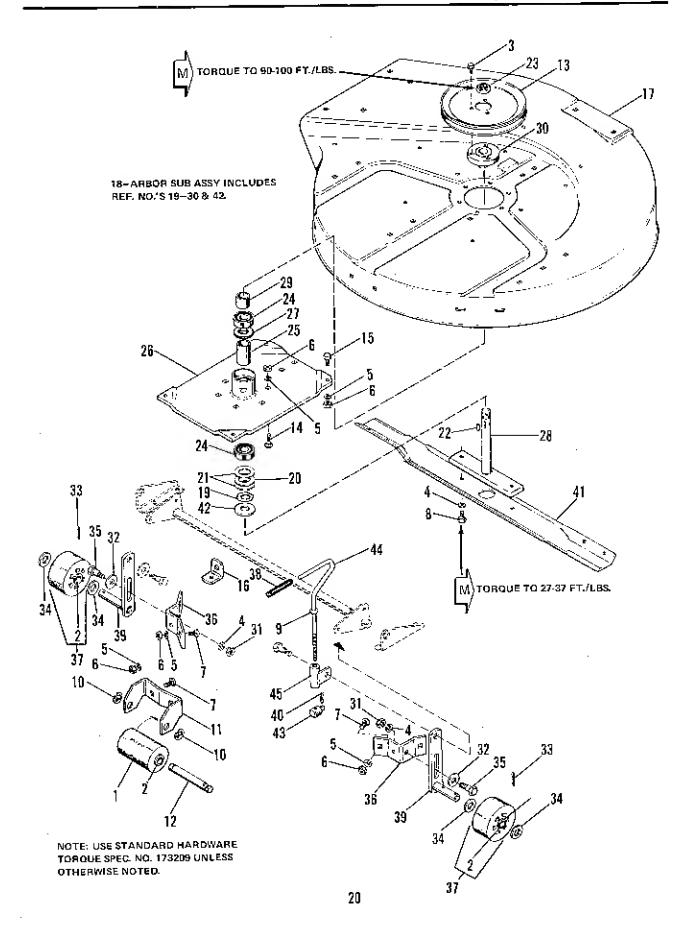




Ref.	Part				
No.	No.	Ωtγ.	Serial No.		Description
7	108431	1	(00000)-(ì	HOLL€R
2	108419	6	(00000)-(ĺ	BUSHING
3	177932	3	(00000)-(i	SCREW, Thd. Forming
4	916965	4	[00000]-(i	LOCKWASHER, Spring, 3/8
5	917356	14	(00000)-(i	LOCKWASHER, Spring, 5/16
6	91/372	14	(00000)-(i	NUT, Hex, 5/16-18
1	919413	6	(000001)-{	Ė	BOLT, Carriage, 5/16-18 x 5/8
8	923490	2	[00000]-(i i	CAPSCREW, Hex Hd., 3/8-16 x 1
9	92494D	1	(00000)-(i	WASHER, Plain, 3/B
ΙÓ	1602155	2	(00000)-(j	RING, E
11	1603204	1	(00000)-(i i	BRACKET, Center, Roller
12	1603205	1	(00000)-(SHAFT, Center, Roller
13	1608959	1]-[00000]	i	PULLEY, Mower
14	92115B	6	(000001-0	i	BOLT, Carriage, 5/16-18 x 1
15	921333	2	(00000)-(i	CAPSCREW, Hex Hd., 5/16-18 x 1
(G	1602446	2	(00000)-(j	CLIP, Spring Anchor
17	160B351	1	(00000)-(í	HOUSING, 30" Mower
18	1651034	7	(00000)-(i	ARBOR SUB-ASSY
19	108181	1	(00000)-(i	WASHEH
20	108257	1	(00000)-(į	WASHER
21	108472	2	1-(00000)	,	WASHER
22	918312	1	{DDDDD]-{	í	KEY, Waadruff, No. 61 - 3/16 x 5/8
?3	922133	i	100000)-1	j	NUT, Hex, Lock, 3/4-16
24	108202	2	(00000)-(j	BEARING, Ball
25	176984	1	10000001-1	j	SPACER
26	1651298	i	{000000}-{	j	TUBE ASSY, Arbor
27	109134	1	1000000)-1	í	
28	1651293	i	(00000)-1	j	RING, Backing ARBOR ASSY
29	1651295	i	{000000}-1	j	SPACER
30	1651404	1	[00000]-[í	HUB, Pulley
31	916950	2	1-[00000]	j	NUT, Hex, 3/8-16
32	918430	2	[000000]-1	j	WASHER, Plain, 7/16
33	918458	4	(00000)-(j	PIN, Cotter, 3/16 x 1
34	919387	4	(00000)-1	i	WASHER, Plain, 5/8
35	1602186	2	(00000)-{	i	BOLT, Shoulder
36	1602211	2	1-(00000)	i	BRACKET, Roller Support
37	1603206	2	(00000)-(ŀ	HOLLER ASSY
3.B	176985)	(DD000)-(j	GRIP
39	1607603	2	1-[00000)	í	SHAFT ASSY, Roller
40	918448	î	(000001-1	í	PIN, Cotter, 3/32 x 1
41	1651297	i	[00000]	j	BLADE, 30" Mower
42	108182	i	1-(00000)	,	WASHER, Arbor
43	108172	· i	(00000)-(í	PIVOT
14	176775	1	(00000)-[í	HANDLE, Adjusting
1 5	176777	1	(00000)-(í	GUIDE ASSY, Rod

For Service of Mower Asbor, Order Kit No. 1685006 (Includes Ref. No's 18-30, 41 & 42).

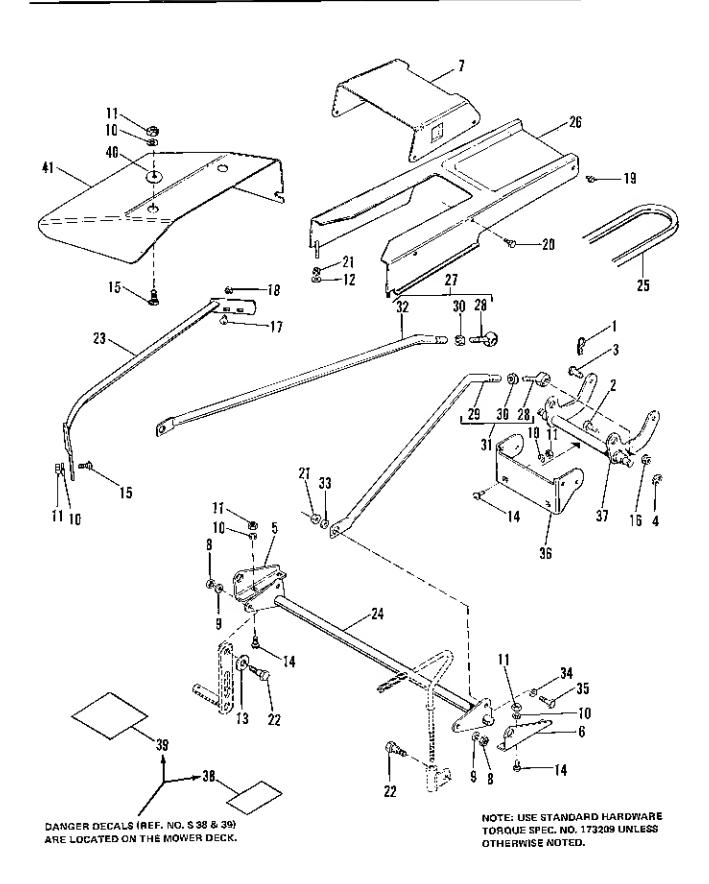




					···
Ref. No.	Part No.	Qty.	Serial No.	-	Description
					<u> </u>
1	106788	2	(00000)-(þ	SPRING, Clip
ż	108711	2	(00000)-(í	90L1, Shoolder, Hex Hd., 3/8-16 x 3/4
3	156306	2	(00000)-(í	PIN
4	158399	2	(00000)-(í	RING, Retaining
5	176769	í	(DOODO)-(í	
6	1/6//0	1	(00000)-(i	BRACKI, T., Pivot, L.H.
7	176791	i	(00000)-(BRACKET, Pivot, R.H.
Ŕ	916950	2	(00000)-())	COVER, Upper
9	916965	2		Š	NUT, Hex, 3/8 16
10			{000000}-{		LOCKWASHER, Spring, 3/8
11	917356	10	(00000) ()	FOCKWASHER, Spring, 5/16
12	917372	10	(00000)-{)	NUT, Hex, 5/16-18
13	917642	4	(00000)-()	WASHER, Plant, 5/16
14	918430		1-(00000))	WASHER, Plain, 7/16
	919413	6	(00000)-()	BOLT, Carriage, 5/16-18 x 5/8
15	920562	4	(00000) ()	θΩι,Τ, Carnage, 5/16·18 x 3/4
16	923428	2	(00000)-[)	NUT, Hex, Full Lock, 3/8-16
17	923/00	2	(00000)-()	BOLT, Carriage, 5/16-18 x 1/2
18	928698	2	1000000)-1	}	NUT, Hex, Lock, Jam, 5/16-18
19	928730	2	(00000)-)	SCREW, Hex, Wshr. Hd., Taptite, 3/8-16 x 1/2
20	929000	2	(00000)-()	SCREW, Hex, Wahr, Hd., Taptite, $1/4\cdot20 \times 3/8$
21	919001	4	[00000]-1)	NUT, Flange, Lock, 5/15-18
22	1602186	2	(00000)-(1	BOLT, Shoulder
23	7608374	1	(00000)-()	GUARD ASSY, Stone, 30" Mower
24	160B949	1	(000000) ()	CONTROL ARM ASSY, Mower Housing
25	1 6 08957	1	(00000)-()	BELT, Mawor, Drive
26	1609032	1	(00000)-()	COVER ASSY, Lower
27	1652861	1	(00000) (1	ARM ASSY, Adjusting, R.H.
28	157215	2	(00000)-(F	EYEBOLT
29	176736	1	(00000)-()	ARM, Adjusting, R.H.
30	919262	2	(00000)-(1	NUT, Hex. Jam., 1/2 20
31	1652862	1	(00000)-(ŀ	ARM ASSY, Adjusting, L.H.
32	175942	1	(00000)-(1	ARM, Adjusting, L.H.
33	153081	2	(00000)-(1	SPACEIT
34	917378	2	(00000)-(ŀ	WASHER, Plain, 3/8
35	921210	2	(00000)-(1	CAPSCREW, Hex Hd., 3/8-16 x 7
36	1608940	í	(000000)-(1	BRACKET, Movies
37	1608947	1	(00000) (1	AftM ASSY, Link
38	1656856	1	(00000)-(F	DECAL, Danger
39	1656857	1	(00000)-(1	DECAL, Danger
40	8161199	2	(00000)-()	WASHER
41	1651492	1	(00000)-()	DUFLECTOR

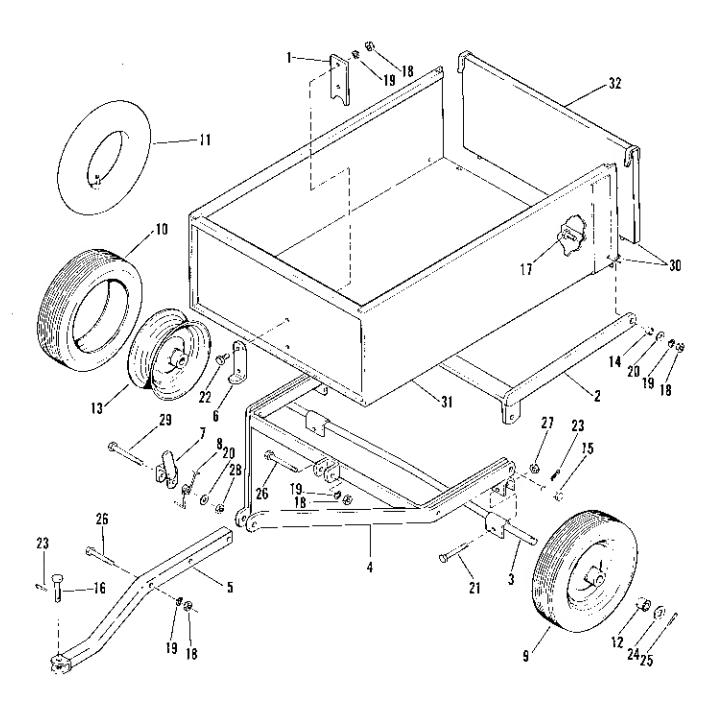


NOTE: USE STANDARD HARDWARE TORQUE SPEC. NO. 173209 UNLESS ONTERWISE NOTED.


77-1

Ref.	Part				
No.	No.	Oty.	Serial No.		Description
1	102005	-	(80000)		
2	102003	T 1	(00000)-(]	PLATE, Box Guide
3		1	[00000] (ŀ	PIVOT, Box assy.
4	102027		[00000]-(]	AXLE ASSEMBLY
5	102035	1	(00000)-(,	FRAME ASSEMBLY
6	102037		(00000)-(TONGUE ASSEMBLY
7	102040	1	1000000)-(!	PLATE, Box Carch
В	102051	1	1-(000001	ŀ	CLÉVIS ASSEMBLY
_	102075	1	(00000)-(ŀ	SPRING, Torsion
9	170320	2	1 (00000)	,	WIFEEL & TIRE ASSEMBLY
10	102052	2	1-(000001]	TIRE
11	153038	2	(00000) (,	TUBE, 4.00 x 8
12	156316	4	(00000)-(1	BEAHING
13	170319	2	(DD000a)-()	WHEEL
14	8151076	2	1-100000)	ĵ	BUSHING
15	102004	2	[00000]-()	PIN, Pivot
16	105249	1	(0000D)-()	PIN
17	907731	2	(00000)-()	CAPSCREW, Hex. 3/8-16 x 1
18	916950	G	(00000)-()	NUT, Hex Full, 3/8-16
19	916965	6	(00000)-(LOCKWASHER, 3/8
20	91737B	3	1-(00000)		WASHER, 3/8
21	917398	2	1000000]-()	CAPSCREW, 5/16-18 x 1 3/4
22	917400	2	(000000)-(]	CAPSCREW, Hex, 3/8-16 x 1 1/4
23	918195	3	(000000)-(}	PIN, Quick
24	918433	2	[00000]-[)	WASHER, Plain, 3/4
25	918459	2	(00000)-(J	PIN, Cotter, 3/16 x 1 1/2
26	919362	2	(00000)-(1	CAPSCREW, Hex, 3/8-16 x 2 1/4
27	923362	2	(00000)-1	1	NUT, Hex Full, 5/16-18
28	923428	1	(00000)-(}	NUT, Hex Full, 3/8-16
29	930596	1	(00000)-()	CAPSCREW, Hex, 3/8/16 x 2 3/4
30	1655704	1	(0000D)-()	TRAILER & END GATE ASSY.
31	102002	· T	(00000)-()	BODY, Trailer
32	102003	1	[00000]-()	GATE END

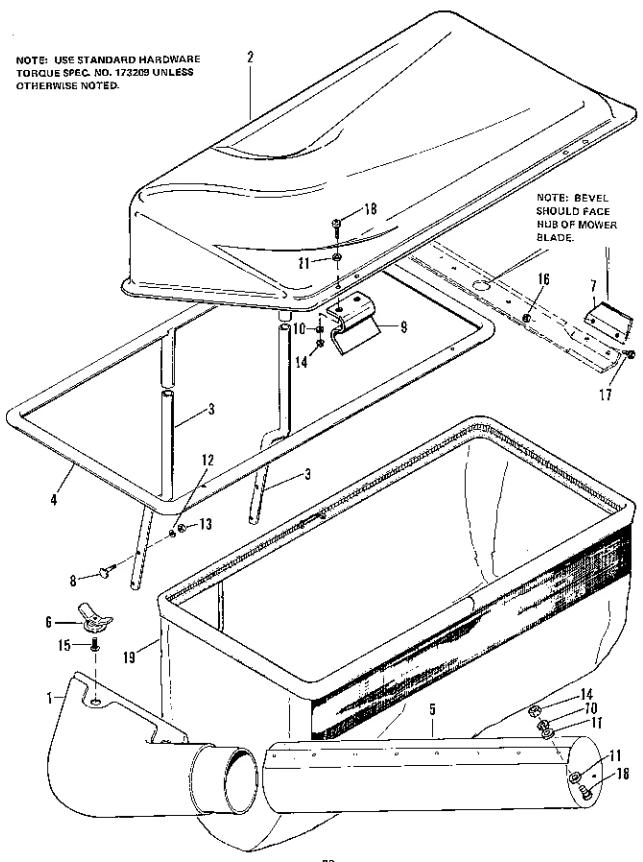

Ref.	Part					//-1
No.	No.	Oty.	Serial No	۱.	Description	
1	176871	1	(00000)-(1	ADAPTOR	
2	177019	1	(00000)-(į	COVER	
3	177096	2	(00000)-(,	SUPPORT, Verticle	
4	178364	1	(00000)-(ŀ	SUPPORT ASSY	
5	1650438	1	(000001-(ŀ	TUBE, Intake	
6	123103	2	(00000)-(ŀ	NUT ASSY	
7	17/243	2	(000001-(1	PLATE, Lift	
8	177249	4	1000001-1	1	BOLT, Curved Read	
9	178609	4)-(00 0 00))	CLIP	
10	909055	17	(000 00) (•	LOCKWASHER, No. 10, 3/16, Internal Tooth	
17	916955	26]-(00000)	1	WASHER, Plain, 3/16	
12	91735G	4	1-1000001	J	LOCKWASHER, Spring, 5/16	
13	917372	4	(00000)-(]	NUT, Hex, 5/16-18	
14	917415	17	(00000)-(]	NUT, Hex, Mach. No. 10-32	
15	920563	2	(0000001-(J	BOLT, Carriago, 5/16-18 x 1	
16	923362	4	(100 00 0)]	NUT, Hex, Lock, 5/16-18	
17	925205	4	[00000]-[þ	CAPSCREW, Hex Hd., 5/16-18 x 5/8	
18	930531	17	(000001) (]	SCREW, Truss Hd., No. 10-32 x 1/2	
19	1655506	1	- 000000	1	GBASS 8AG	

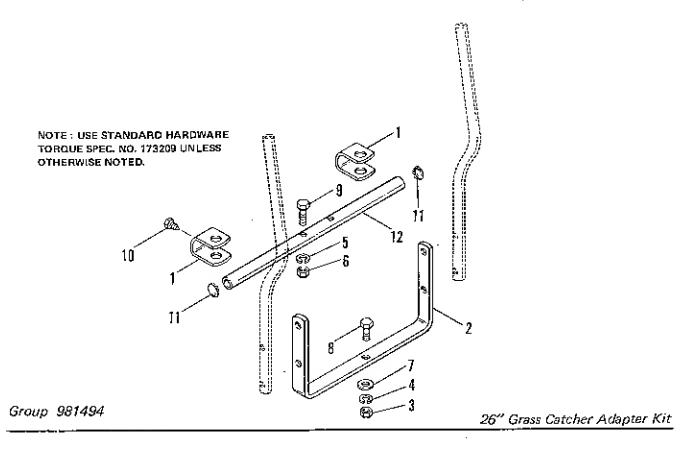

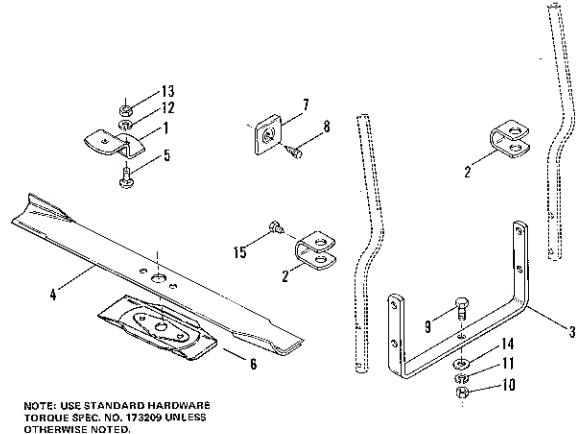


Ref. No.	Part No.	Qty.	Serial No		Description	<i>77-</i>
	<u>-</u>					
1	177391	2	(00000)-()	CLAMP	
2	177392	1	(ààooa)-(}	SUPPORT, Bracket	
3	916950	1	(00000)-(1	NUT, Hex. 3/8-16	
4	916965	1	(00000)-[1	LOCKWASHER, Spring, 3/8	
5	917356	2	(00000)-()	LOCKWASHER, Spring, 5/16	
6	917372	2	(00000)-(}	NUT, Hox, 5/16-18	
7	917378	1	(00000)-()	WASHER, Plain, 3/8-18	
₿	921210	1	(00000)-(j	CAPSCREW, Hex Hd., 3/8-16 x 1	
9	921221	2	(00000)-(}	CAPSCREW, Hex Hd., 5/16-18 x 1-1/2	
10	927428	2	(00000)-(}	SCREW, Hex, Wahr, Hd., Taptite, 1/4-20 x 3/8	
11	1608835	2	[-(00000)	i i	PLUG, Button	
12	1611463	1	(00000)-{	i	TUBE, Rear	

Mfg. No. 1600333

26" Grass Catcher Adapter Kit

Ref.	Part					77-1
No.	No.	Qty.	Serial No	•	Description	
1	177389	1	(00000)-(}	SUPPORT, Adaptor	
2	177391	2	(00000)-(j	CLAMP	-
3	177392	1	(00000)-()	SUPPORT, Bracket	
4	177394	ī	(00000)-(}	BLADE ASSY	
5	930685	í	(00000)-(j	BOLT, Camage, 5/16-18 x 5/8	
G	177395	1	(00000)-(1	STIFFNER, Blade	
7	177497	1	(00000)-()	DEFLECTOR, Muffler	
8	177498	1	(00000)-(}	SCREW	
9	907731	1	{00000}-()	CAPSCREW, Hex Hd., 3/8-16 x 1	
10	916950	1	(00000)-()	NUT, Hex, 3/8-16	
11	916965	1	(00000)-()	LOCKWASHER, Spring, 3/8	
12	917356	1	(00000)-(1	LOCKWASHER, Spring, 5/16	
13	917372	1	(00000)-()	NUT, Hex, 5/16-18	
14	917378	1	(00000)-(j	WASHER, Plain, 3/8	
15	922123	2	(00000)-(}	SCREW, Thd. Cutting, Hex Hd., 1/4-20 x 3/8	

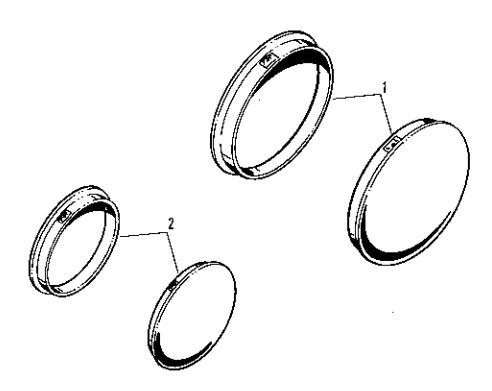



Ref. No.	Part No.	Qty.	Serial No	L	Description	
	156211 163114	2 2	(00000)-(] J	CAP, Front Hub CAP, Hub	

		ė.	
	40		
		·	

TORQUE SPECIFICATIONS FOR STANDARD MACHINE HARDWARE TOLERANCE ± 10%

SIZE	SAE GRADE #2		SAE GRADE #5		SAE GRADE #8	
		<u> </u>		<u> </u>		V.V
8-32	19	ln. Lbs.	30	In. Lbs.	41	In. Lbs.
8-36	20	**	31	и	43	"
10-24	27	ré	43	и	60	"
10-32	31	re	49	11	68	"
1/4-20	66		8	Ft. Lbs	12	Ft. Lbs.
1/4-28	76	**	10	и	14	
5/16-18	11	Ft. Lbs	17	er	25	41
5/16-24	12	**	19	n .	25	**
3/8-16	20	74	30	j.r	45	**
3/8-24	23	FF	35	12	50	#
7/16-14	30	re	50	M	70	**
7/16-20	35	r p	55	n	80	"
1/2-13	50	ré	75	ar .	110	re
1/2-20	55	rr	90	17	120	**
9/16-20	65	rr	110	17	150	**
9/16-18	75	74	120	17	170	**
5/8-11	90	P#	150	n	220	79
5/8-18	100	re	180	u	240	re
3/4-10	160	re	260	**	386	**
3/4-16	180	re	300	**	420	rı
7/8-9	140	re	400		600	
7/8-14	155	**	440	**	660	1r
1-8	220	**	580	**	900	47
1-12	240	"	640	P4	1,000	47

NOTES:

- These torque values are to be used for all Simplicity hardware excluding: locknuts, self-tapping screws, thread forming screws, and sheet metal screws.
- 2. Unless otherwise noted on assembly drawings all torque values must meet this specification.

BOLT HEAD MARKING S.A.E. GRADE:

2



5



8



		*
		;